 


V90-DAC 32 Bit Digital To Analog Converter with 24-bit/96kHz Asynchronous USB

Instructions

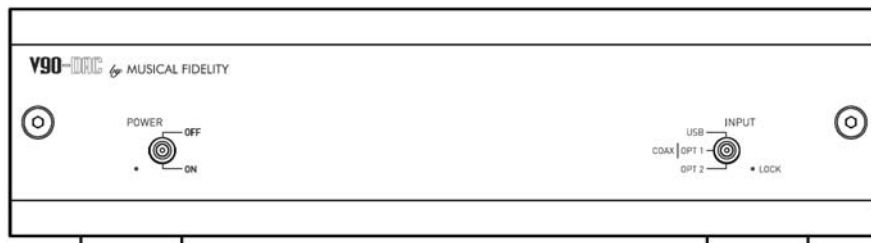

Introduction

Thank you for purchasing the V90-DAC digital to analog converter. We sincerely hope that it will bring you many years of outstanding listening pleasure.

Installation Precautions

Your new V90-DAC is designed and built to provide trouble-free performance, but as with all electronic devices, it is necessary to observe a few precautions:

Do not use the V90-DAC near water. The unit must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, must be placed on the unit.

Keep the V90-DAC away from heat such as radiators. No naked flame sources, such as lighted candles, should be placed on the unit.

Power Supply Note:

Only use approved *Musical Fidelity* DC power supply. The use of other adaptors or supplies could seriously damage the V90-DAC.

This Hi-fi product has been tested to ensure that its operation is not adversely affected by normal background levels of Radio Frequency Interference (R.F.I.), and that it does not itself generate excessive amounts of interference. However, if a problem persists, please contact your Musical Fidelity agent.

Never open the case of the V90-DAC yourself, as this will invalidate the guarantee. Place all connecting cables where they are not likely to be walked on or trapped by items placed on them.

The V90-DAC will operate in accordance with its specifications within the following environmental range:

Temperature 5 to 45 degrees Celsius
Humidity 10 to 90% non condensing

There are no user adjustments inside. Please refer all service work to an authorised Musical Fidelity agent.

Connections

All connections must be made before the mains adaptor is plugged in, and before any amplifier connected is switched on. Always switch off the equipment attached to the V90-DAC before connecting/disconnecting power, changing leads or inputs.

Digital coaxial inputs

Using good quality digital RCA (SPDIF) leads (not supplied), connect the digital coaxial output from a digital audio source (e.g. CD player) to the V90-DAC **COAXIAL** socket.

Digital optical inputs

Using good quality optical (TOSLINK) leads (not supplied), connect the digital optical output from a digital audio source (e.g. CD player) to the V90-DAC **OPTICAL 2** socket (or **1** if **COAXIAL** input is not already used).

Note the COAXIAL and OPTICAL 1 inputs are a *shared* input. The unit will only respond to the first of these inputs to present a valid digital stream if both are used.

USB input

A quality USB A-B cable is required to connect the unit to a computer. Plug the B (square) end into the socket in the back of the V90-DAC and the A (rectangle) end into a free USB socket on your computer. Set the input select switch to "USB".

Once the unit is plugged in and powered, the computer should detect the new hardware and install a generic driver automatically (No setup or driver disk required). The V90-DAC is then ready to play V90-DAC, CD or any other form of music file recognised by the *computer*.

Outputs

Make sure following the amplifier is turned off. Connect the V90-DAC left and right outputs to the line level inputs of the amplifier system.

Power

Plug the DC connector lead from the power supply unit into the V90-DAC's power inlet socket, and plug the adaptor itself into a convenient wall mains outlet. The blue LED will light to confirm the unit is ready for use, and the green LED should also be lit indicating presence of digital signal.

Use Turn the volume on amplifier to normal listening levels, set the input selector switch to desired input, sit back and enjoy the music!

Additional USB Information

On the host computer, a new mixer will be available, which is the default mixer whenever the DAC is plugged in. Use this mixer to select the source or adjust levels if required. CD, MP3, WAV files played on any software should now play through the DAC. This device has been designed to work with Windows 98, ME, 2000, XP, Vista, 7 and 8, Linux and Apple OS

The computer drivers for the USB input of the V90-DAC should install automatically. To check correct installation follow these steps:

PC users

Check the computer has picked up the device and is currently using it by clicking: (most Windows versions)

- Start
- Settings
- Control panel
- Sounds and Multimedia
- Audio

Check "V90-DAC 24/96" appears under PREFERRED AUDIO DEVICE tab.

Mac users

 
Check the computer has picked up the device and is currently using it by clicking: (MAC OS X)

- System preferences
- Hardware
- Sound


Check that "V90-DAC 24/96" is selected under the OUTPUT tab.

If the computer's warning sounds/chimes are to played through the DAC, make sure it is selected under the SOUND EFFECTS tab too.

This device is a high speed serial data processor, and by its nature, requires a very high volume of USB bandwidth. It will benefit greatly from being the only device connected on its USB 'port'. Sharing the same port with other devices may cause unwanted artefacts such as dropouts or temporary loss of signal. This especially includes the use of the DAC on a USB hub/splitter alongside other USB components.

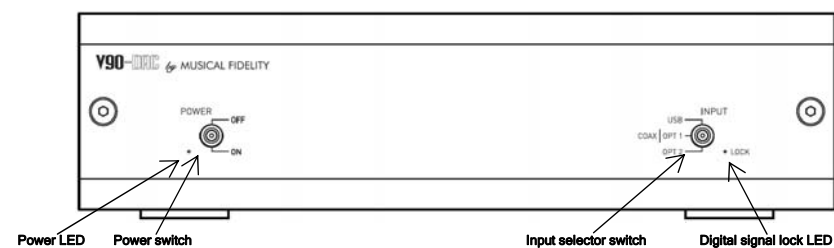

 RCA outputs Left and Right USB type "B" input socket COAX SPDIF input OPTICAL input 1 OPTICAL input 2 12V DC power socket

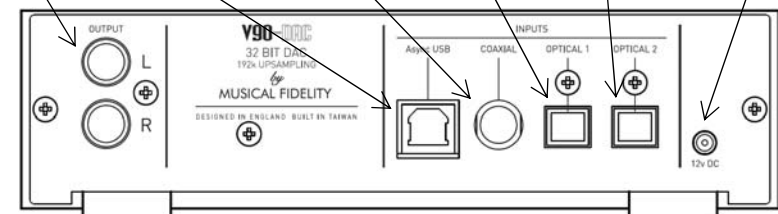

Basic problem-solving with an amplifier is similar to troubleshooting other electrical or electronic equipment. Always check the most obvious possible causes first, such as the following examples:		
Problem	Probable Cause	Remedy
No power	Unit or power supply not switched on. Power plug is not fully inserted into rear socket	Check power supply is plugged in and switched on, as well as ON/OFF POWER toggle switch Plug in securely.
No sound	Wrong connections between input source and the V90-DAC Wrong source selected Multichannel stream being set to V90-DAC from DVD or Blue-Ray player	Check digital/USB input leads are securely connected. Check INPUT SELECT switch is correctly set and green LOCK LED is lit. Check digital source output is set to give 16 bit Stereo PCM digital stream (refer to source product's manual)
	Wrong connections between the V90-DAC output and the following component	Check audio input lead connections
Hum	Audio connector plug not fully pushed in	Insert plug securely
Dropouts in sound (Digital inputs)	Digital input lead not properly connected Faulty digital input lead	Check input lead is fully secured Change or replace lead. Please use a good quality straight-through signal-and-ground phono to phono lead for coaxial connection.
No Sound (USB input)	Computer USB port not working or incorrectly setup	Check USB port with another USB device. See "additional USB information" section
Dropouts in sound (USB input)	Shared USB port with another device Computer busy with another application Computer low on resources	Avoid sharing the USB port with other devices, if possible. At times an application (program) may intervene, sometimes invisibly e.g. a virus scanner. When this happens, computer resources are temporarily used up, and playback may suffer. This is not a fault. Try running fewer applications if possible.
If none of these actions affect a cure, please contact the dealer, or an authorised Musical Fidelity service agent. Remember; never open the case of the V90-DAC, as this will invalidate the guarantee.		

Specifications:	DAC	32 Bit	upsampled to 192kHz on all inputs	
	Output impedance	47Ω		
	Maximum output	2.2V		
	Total harmonic distortion	0.0004%	20Hz-20kHz	
	Frequency response	+0, -0.1dB	20Hz-20kHz	
	Crosstalk	-104dB	20Hz-20kHz	
	Signal / noise ratio	-117dB	"A"-weighted	
	Total Jitter	12ps		
	Power requirement	12V DC	500mA	
	USB input	Asynchronous data stream at up to 24-bit/96kHz		
Connections	Digital inputs	1 RCA (coaxial), 2 TOSLINK (optical), 1 USB (type B)		
	Line level outputs	1 pair RCA sockets		
	Power input	1.3mm DC power socket		
Dimensions	Length	102mm	4"	including terminals and switches
	Width	170mm	6½"	
	Height	47mm	1½"	
Weight	Unit alone	600g	1½ lbs	
	Unit packed in carton	1.1Kg	2½ lbs	
Accessories (supplied)	DC power supply	12V	500mA	1 off
	Leaflet	V90-DAC	instructions	1 off
Musical Fidelity reserves the right to make improvements which may result in specification or feature changes without notice. E&OE.				

Item disposal information for Europe



<p>DISPOSAL The crossed out wheeled bin label that appears on the back panel of the product indicates that the product must not be disposed of as normal household waste. To prevent possible harm to the environment please separate the product from other waste to ensure that it can be recycled in an environmentally safe manner. Please contact your local government office or your retailer for available collection facilities.</p>	<p>AFVAL Het label op de achterzijde van dit apparaat, een afvalbak op wielen met een kruis doorgehaald, geeft aan dat dit apparaat niet samen met gewoon huishoudafval mag worden weggegooid. Om mogelijke schade aan onze leefomgeving te voorkomen dient dit apparaat, gescheiden van gewoon huishoudelijk afval, te worden afgevoerd zodat het op een milieuvriendelijke manier kan worden gerecycled. Neem voor beschikbare inzamelplaatsen contact op met uw gemeentelijke reinigingsdienst of met uw elektronica leverancier.</p>
<p>DISPOSITION La poubelle sur roulettes barrées X, qui apparaît en logo sur le panneau arrière du produit, indique que celui-ci ne doit pas être traité comme un déchet domestique commun. Afin de protéger l'environnement, ce produit électronique devra être géré séparément et donc recyclé selon les nouvelles normes Européennes RoHS concernant les déchets d'appareils électroniques. Prière de contacter les services concernés gouvernementaux ou votre point de vente pour l'élimination et l'enlèvement de déchets électroniques équipés de composants électroniques.</p>	<p>HÄVITÄMINEN Yliüksäätua jäteastiaa kuvaava tarra tuotteen takalevyssä kertoo, että tuotetta ei saa käsitellä normaalina talousjätteenä. Ympäristön suojelemiseksi on tuote pidettävä erillisin muusta jätteestä ja se on kierrätettävä ekologisesti kestävässä tavalla. Ota yhteyttä laitteen myyjään tai Pirkanmaan ympäristökeskukseen lähimmän kierrätyskeskuksen löytämiseksi.</p>
<p>DISPOSAL La etiqueta cruzada hacia fuera del compartimiento que aparece en el panel trasero del producto indica que el producto no se debe reciclarse como basura normal de la casa. Para prevenir daños posible al ambiente separe por favor el producto de otras basura para asegurarse de que puede ser reciclada de una manera ambientalmente segura. Entre en contacto por favor a su oficina gubernamental local o a su minorista para las instalaciones disponibles de la colección.</p>	<p>AFSKAFNING Logoen med en skraldespand med kryds over på bagsiden af apparatet indikerer at dette produkt ikke må kasseres som normal husholdningsaffald. For at forebygge mulig skade på miljøet, bedes De separere dette produkt fra andet affald, og sikre at det bliver genbragt på en miljørigtig måde. Kontakt venligst de lokale myndigheder eller din forhandler for oplysning om nærmeste tilgængelige opsamlingssted for elektronikaffald.</p>
<p>RIFIUTI L'etichetta del cassonetto barrato riportato sul retro dell'apparecchio indica che il prodotto non deve essere smaltito tramite la procedura normale di smaltimento dei rifiuti domestici. Per evitare eventuali danni all'ambiente, separare questo prodotto da altri rifiuti domestici in modo che possa venire riciclato in base alle procedure di rispetto ambientale. Per maggiori dettagli sulle aree di raccolta disponibili, contattate l'ufficio governativo locale od il rivenditore del prodotto.</p>	<p>ΔΙΑΚΑΦΙΑ ΑΠΟΡΡΙΨΗΣ ΤΟ ΣΗΜΑ ΜΕ ΤΟΝ ΔΙΑΓΕΓΡΑΜΜΕΝΟ ΤΡΟΧΗΛΑΤΟ ΚΑΔΟ ΑΠΟΡΡΙΨΑΤΩΝ ΣΤΗΝ ΠΙΣΩ ΟΥΧ ΤΟΥ ΜΗΧΑΝΗΜΑΤΟΣ ΔΗΛΩΝΕΙ ΟΤΙ ΤΟ ΠΡΟΪΟΝ ΑΥΤΟ ΔΕΝ ΠΡΕΠΕΙ ΝΑ ΔΙΑΧΕΙΡΙΣΘΕΙ ΣΑΝ ΣΥΝΗΘΙΣΜΕΝΟ ΟΙΚΙΑΚΟ ΑΠΟΒΛΗΤΟ. ΠΡΟΣ ΑΠΟΦΥΓΗ ΕΝΔΕΧΟΜΕΝΗΣ ΕΠΙΒΑΡΥΝΣΗΣ ΤΟΥ ΠΕΡΙΒΑΛΛΟΝΤΟΣ, ΣΕΠΕΡΑΣΤΕ ΤΟ ΠΡΟΪΟΝ ΑΥΤΟ ΤΑ ΑΛΛΑ ΑΠΟΡΡΙΨΑΤΑ ΩΣΤΕ ΝΑ ΕΛΑΣΘΑΛΙΣΘΕΙ Η ΑΝΑΚΥΚΛΩΣΗ ΤΟΥ ΜΕ ΤΟΝ ΠΡΕΠΟΝΤΑ ΤΡΟΠΟ. ΠΑΡΑΚΑΛΟΥΜΕ ΝΑ ΕΠΙΚΟΙΝΩΝΗΣΕΤΕ ΜΕ ΤΗΝ ΤΟΠΙΚΗ ΥΠΗΡΕΣΙΑ ΑΝΑΚΥΚΛΩΣΗΣ Η ΜΕ ΤΟ ΚΑΤΑΣΤΗΜΑ ΑΓΟΡΑΣ ΓΙΑ ΠΕΡΙΣΣΟΤΕΡΕΣ ΛΕΠΤΟΜΕΡΕΙΕΣ.</p>
<p>FACHGERECHTE ENTSORGUNG Das auf der Geräteückseite angebrachte Label deutet darauf hin, dass das Produkt nicht mit konventionellem Hauskehricht entsorgt werden darf. Um Schäden und Verschmutzungen an Umwelt und Mensch zu vermeiden, muss das Produkt fachgerecht entsorgt und von anderem Abfall getrennt werden. Wenden Sie sich bei Fragen hierzu an ihren Fachhändler oder an eine öffentliche Informationsstelle.</p>	

MUSICAL FIDELITY

Musical Fidelity Limited,
Units 24-26
Fulton Road
Wembley
HA9 0TF
England
(+ 44 208 8900 2866
<http://www.musicalfidelity.com/>

Manual issue 01

